

Kidd Firing Pin Installation

Start with the rear of the bolt to the right side of your working space. Drop the firing pin spring into the slot of the bolt with the big/open end against the pin inside the bolt. Slide the firing pin in from the rear of the bolt with the flat edge down making sure the retainer hole is to the rear of the bolt. Hold down the firing pin to flip bolt onto its side. Still keeping a finger on the firing pin, so it does not pop out, line up the firing pin retainer hole on the bolt to the one on the firing pin. Easily hammer in the coil pin into the retainer hole, so it's slightly below the edge of the bolt.